

The TRACK 1100 ships with a standard battery pack BAT 8203.
Some early versions of the tracker shipped with the battery pack BAT 8201.

Please order battery pack **BAT 8209** for battery replacement.



Step 1


- Make sure that the serial number and logo are facing the right way up.
- Then turn the tracker face down.
- Unscrew the 6 screws.

Tip: If using a power drill, use power setting 7, on low.
(Note: not all power drills have the same settings!)




Step 2

- Remove the back plate and the 6 screws.

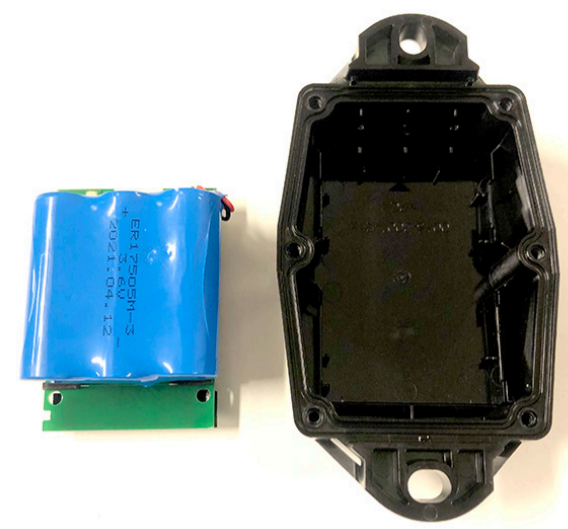


Step 3

- Remove the battery and pcb pack as a whole

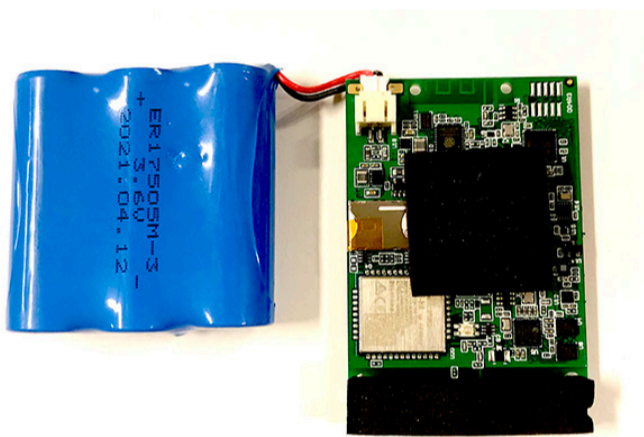


Step 4

Separate the battery pack from the PCB and line them up next to each other.

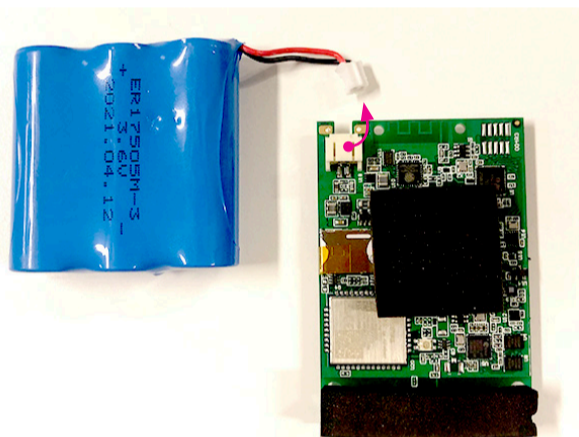


Step 5

Disconnect the battery pack from the PCB. Be carefull in disconnecting the battery pack.

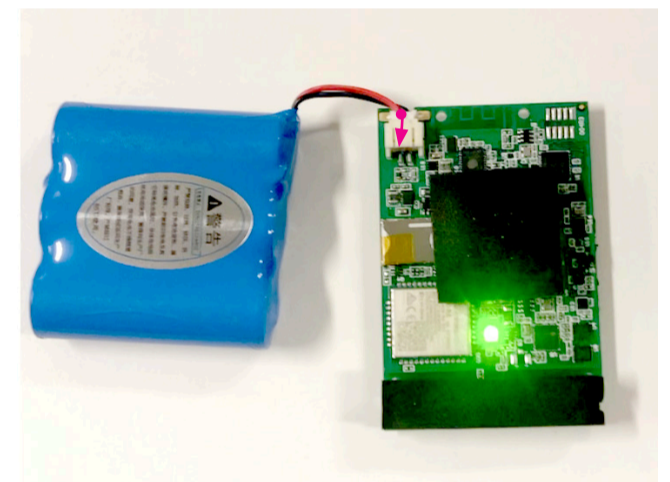

Step 6

Connect the new battery pack to the PCB, a green led will blink for a few seconds.

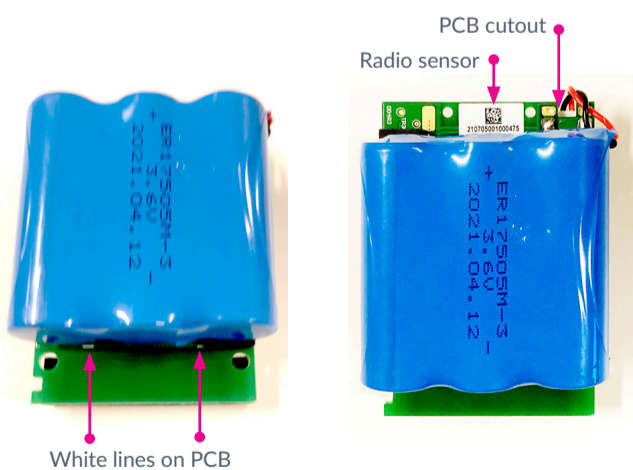

Step 7


Align the battery on the back of the PCB.
Turn the wires around the PCB, there is a cutout in the PCB to guide the wires.

The battery **cannot** cross the white lines on the PCB and **cannot** cover the radio sensor.



Step 8

Place the battery and PCB pack back in the tracker.
There is a little cutout in the PCB to align properly in the tracker.

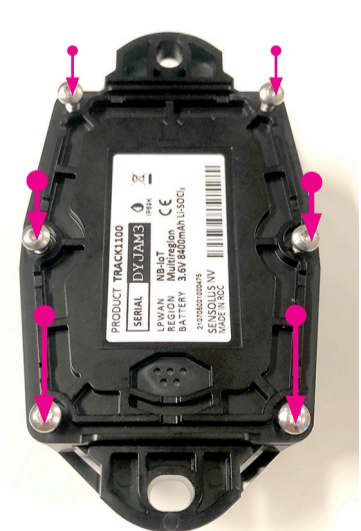

Step 9

Close the tracker carefully. Your tracker is ready to use again.


Indicate battery replaced in platform

SYSTEM

← Container 1234 View

Tracker info | Configuration | Subscription | **Battery** | Diagnostic More ▾

Battery status

19%

Status OK

Battery is estimated to last till **January 2029** (still 60 months remaining).

Battery consumption started on 22 January 2022
Intended battery life is set to **7 years** (at least till 2 Feb 2029).

[Replace battery](#) | [Mark empty](#) | [Reset intended battery life](#) | [Recalculate](#)

Replace battery ✕

Do you want to replace the battery? It will reset all battery information.

Replace Cancel

When you replaced the battery in the tracker you have to indicate the in the platform.

- Go to the tracker details page in the general section. You can search for this tracker or find in in the asset list or asset map.
- Click on the settings button on the far right
- Go to the battery tab
- Click replace battery