

The TRACK 1100 ships with a standard battery pack BAT 8203 or BAT 8209. Please order battery pack **BAT 8205** for battery replacement.

Some early versions of the tracker shipped with the battery pack BAT 8201. Please contact Sensolus if the tracker has a BAT 8201 inside. [You can find an overview of the battery packs here](#)



### Step 1


- Make sure that the serial number and logo are facing the right way up.
- Then turn the tracker face down.
- Unscrew the 6 screws.

Tip: If using a power drill, use power setting 7, on low. (Note: not all power drills have the same settings!)




### Step 2

- Remove the back plate and the 6 screws.

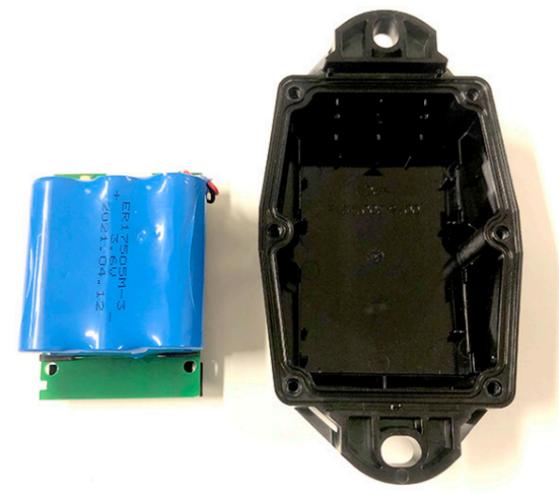

### Step 3

- Remove the battery and pcb pack as a whole

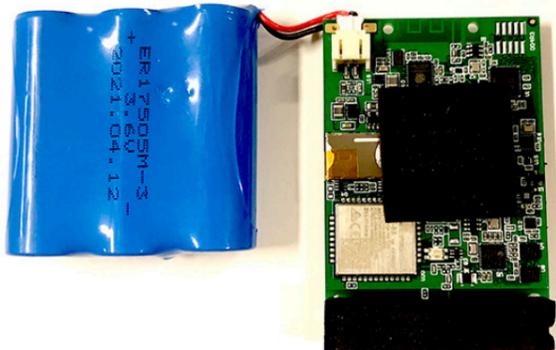


### Step 4

Separate the battery pack from the PCB and line them up next to each other. There is a specific video on how to do this [on the documentation center](#).




### Step 5

Disconnect the battery pack from the PCB. Be careful in disconnecting the battery pack.

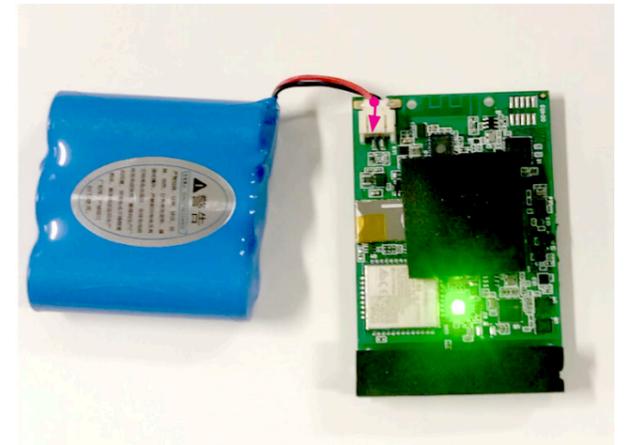

### Step 6

Connect the new battery pack to the PCB, a green led will blink for a few seconds.

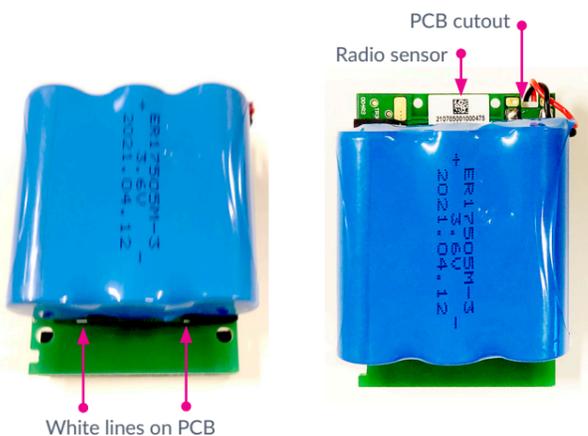

### Step 7

Align the battery on the back of the PCB. Turn the wires around the PCB, there is a cutout in the PCB to guide the wires.

The battery **cannot** cross the white lines on the PCB and **cannot** cover the radio sensor.



### Step 8

Place the battery and PCB pack back in the tracker. There is a little cutout in the PCB to align properly in the tracker.



### Step 9

Close the tracker carefully. Your tracker is ready to use again.

# Indicate battery replaced in platform

SYSTEM

← Container 1234  View

Tracker info | Configuration | Subscription | **Battery** | Diagnostic More ▾

**Battery status**



Status OK

Battery is estimated to last till **January 2029** (still 60 months remaining).

Battery consumption started on 22 January 2022  
Intended battery life is set to **7 years** (at least till 2 Feb 2029).

[Replace battery](#) | [Mark empty](#) | [Reset intended battery life](#) | [Recalculate](#)

When you replaced the battery in the tracker you have to indicate the in the platform.

- Go to the tracker details page in the general section. You can search for this tracker or find in in the asset list or asset map.
- Click on the settings button on the far right
- Go to the battery tab
- Click replace battery

**Replace battery** ✕

Do you want to replace the battery? It will reset all battery information.

Replace Cancel