


Not on moving parts or close to the wheels

On the side where the tracker might get hit by

because shocks might damage the tracker Under the chassis because of bad signal

other equipment

RTPs can come in a variety of shapes and sizes. This manual contains the general guidelines for the installation of trackers on RTPs. We use a fairly generic RTP form factor for this.

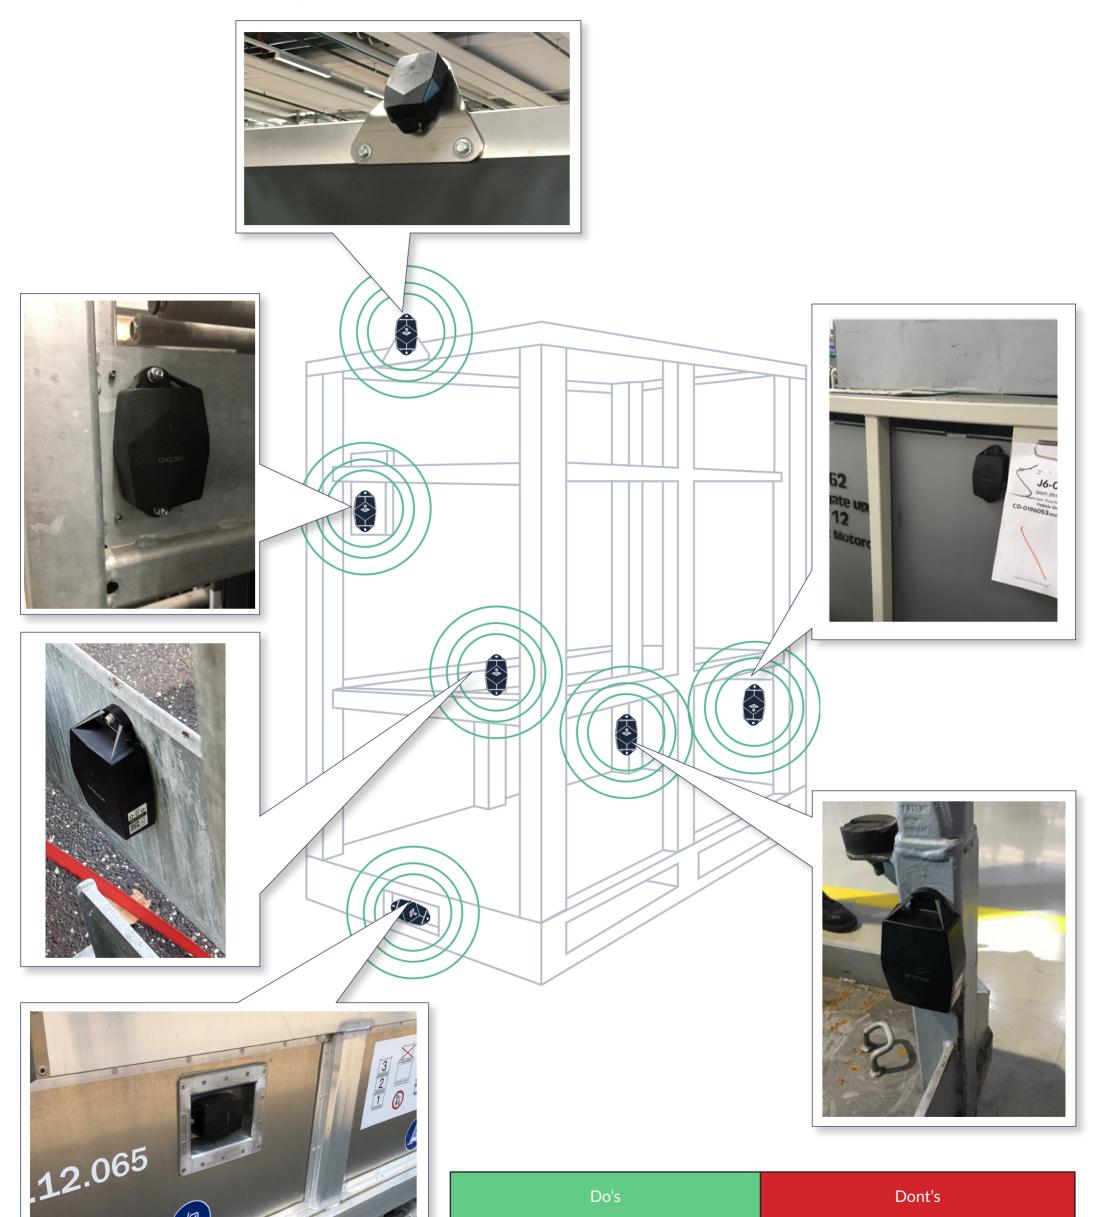

As high as possible

Clear view on the sky

Vertical installation is preffered (logo up)

Use asset's cavaties to install the tracker

www.sensolus.com | info@sensolus.com